

BC 550 MASTER Brushcutter



Documents

Engine

Starter assy

Tank and air filter

Transmission


Accessories

Carburetor WT-1199

Illustrated parts list (Head "Load and Go" Ø130)



WWW.LOBEST.HU

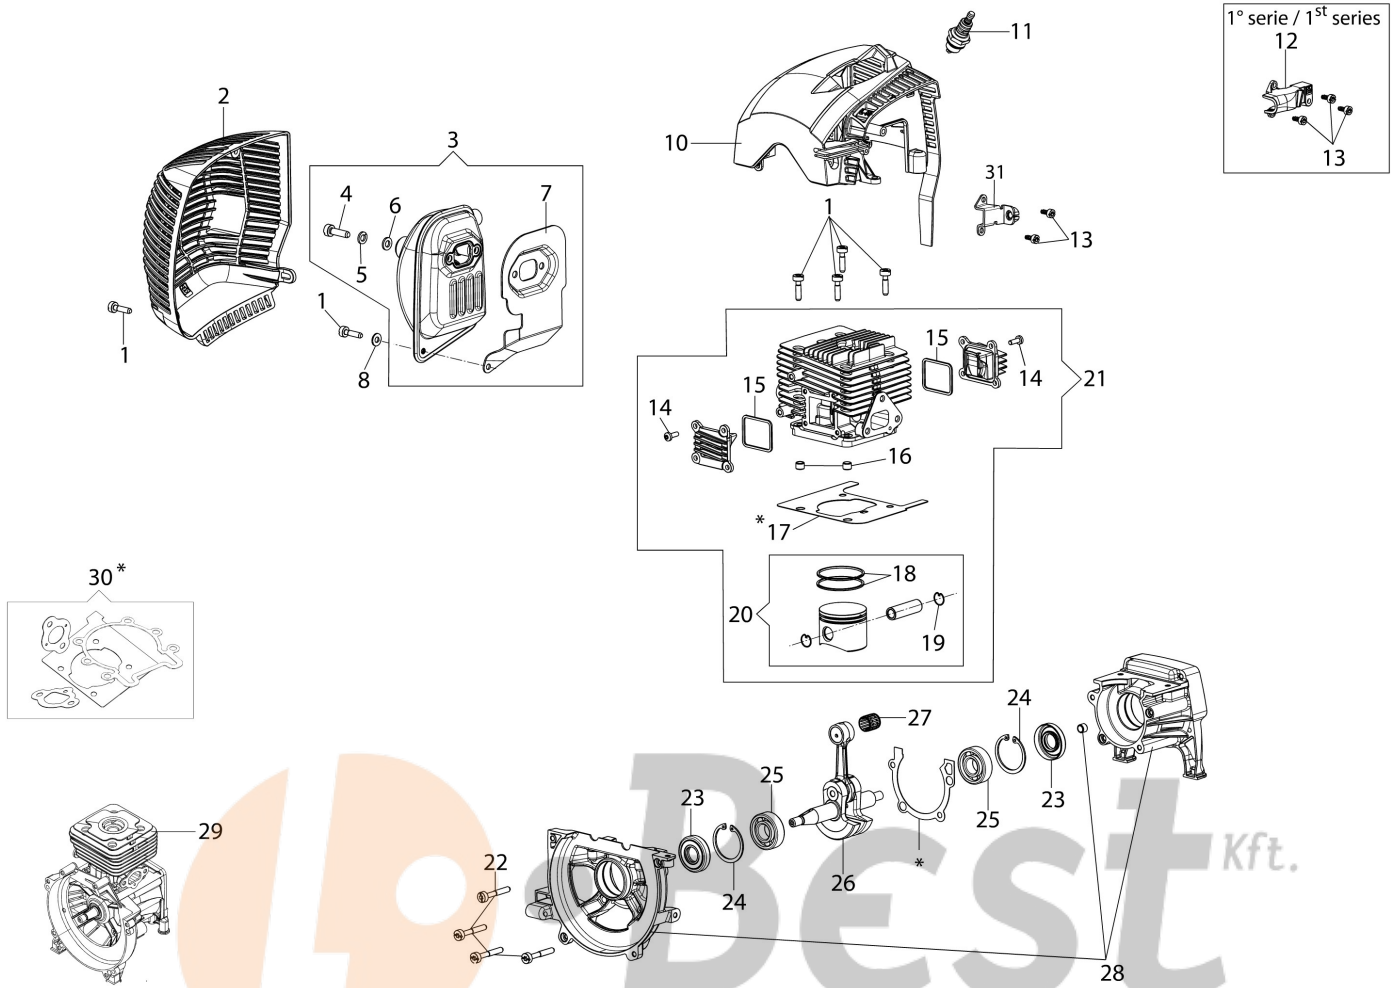

LOBEST Kft.
Kertigépek és alkatrészek

WWW.LOBEST.HU


Illustration Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	7	3891048R	Screw				
2	1	61400033AR	Muffler cover				
3	1	61402053BR	Muffler assy				
4	2	3891086R	Screw				
5	2	3819010R	Washer				
6	2	3916006R	Washer				
7	1	61400038BR	Deflector				
8	1	3819006R	Washer				
10	1	61400139R	Cylinder cover				
11	1	3055118R	Spark plug				
12	1	61400072R	Cover				
13	2	3893016AR	Screw			da 01/07/2019 / since	
13	3	3893016AR	Screw			fino a 30/06/2019 / until	
14	8	3991009R	Screw			30/06/2019	
15	1	61400005R	Gasket				
16	6	4138242R	Bushing				
17	1	61400016R	Gasket				
18	2	50080013R	Piston ring				
19	1	006000012R	Piston pin				
20	1	61400182	Piston assy				
21	1	61400181	Complete cylinder Ø45				
22	4	3891054R	Screw				
23	2	3050001R	Seal ring				
24	2	3025022R	Snap ring				
25	2	3034012R	Bearing				
26	1	61400039R	Crankshaft				
27	1	026400017R	Bearing				
28	1	61400010AR	Crankcase assy				
29	1	61400194R	Short block				
30	1	61400183	Gasket set				
31	1	61400296R	Cover				

Best Kft.
Kertigépek és alkatrészek

WWW.LOBEST.HU

Illustration Starter Assy

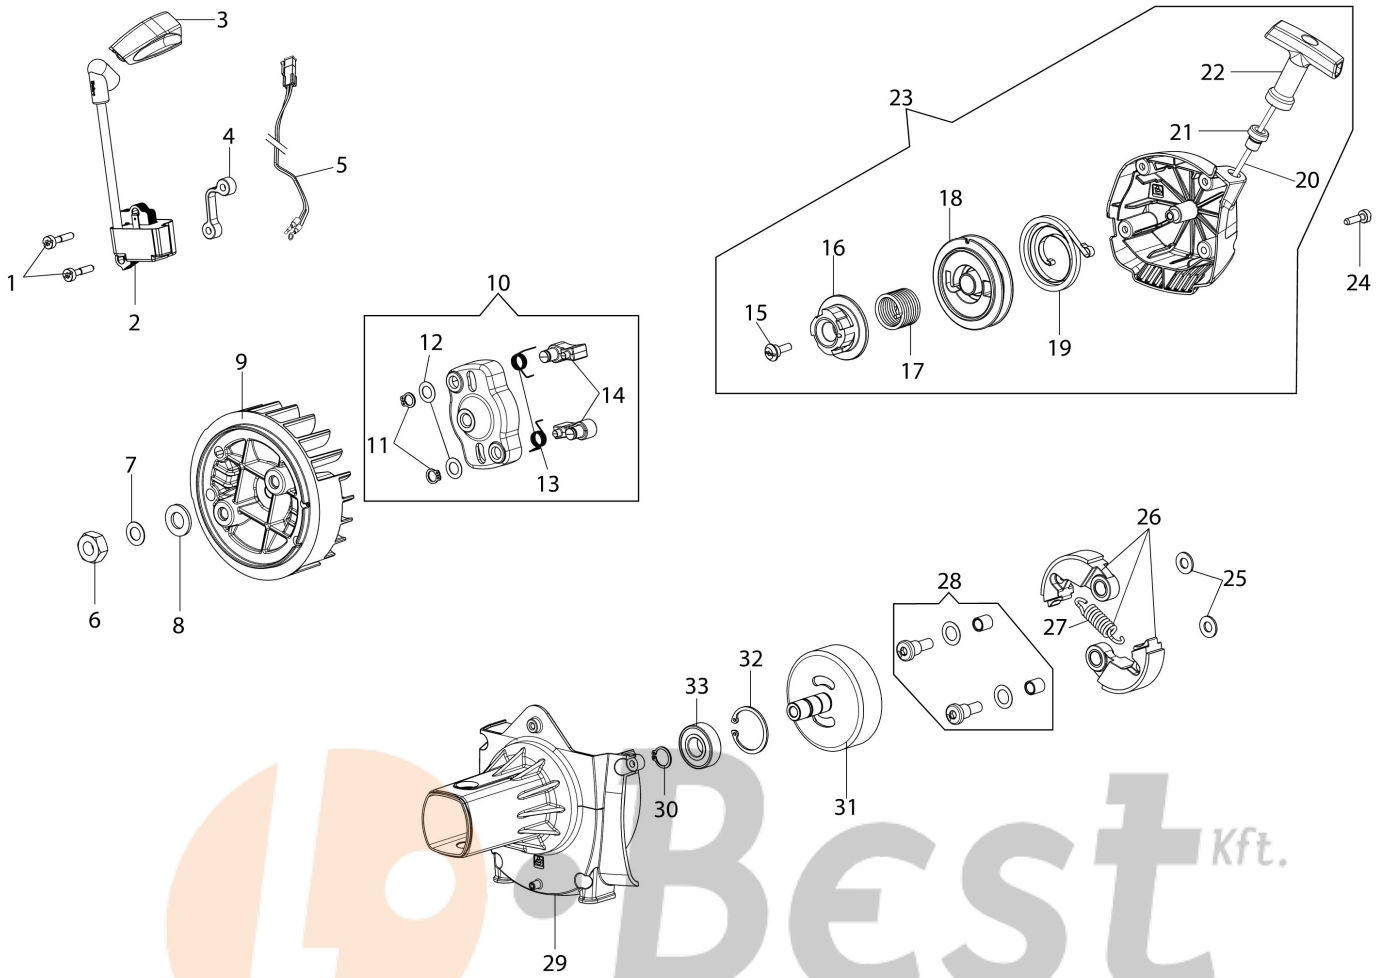

LOBEST Kft.
Kertigépek és alkatrészek

WWW.LOBEST.HU





Illustration Starter assy

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	3891053R	Screw				
2	1	2501007R	Ignition coil				
3	1	61400070R	Spark plug cap				
4	1	61400040R	Spacer				
5	1	61250282AR	Cable				
6	1	004000142R	Nut				
7	1	3833080R	Washer				
8	1	3916009R	Washer				
9	1	61400087R	Flywheel				
10	1	61402007R	Clutch driver				
11	2	3024007R	Ring				
12	2	3064010R	Washer				
13	2	61400024R	Spring				
14	2	61400023R	Pawl				
15	1	61350342R	Screw				
16	1	61400212R	Sprocket				
17	1	61400021R	Spring				
18	1	61400020R	Starter pulley				
19	1	004000132R	Spring				
20	1	4098073R	Starter rope				
21	1	072700089R	Bushing				
22	1	61200015R	Starter handle				
23	1	61402091R	Starter assy				
24	4	3891048R	Screw				
25	2	3818011AR	Washer				
26	1	4191153BR	Clutch				
27	1	4191028R	Spring				
28	1	61420020	Fitment system				
29	1	61400044AR	Starter case				
30	1	3024015R	Ring				
31	1	4191030R	Clutch drum				
32	1	3025022R	Snap ring				
33	1	3035042R	Bearing				

Best Kft.
Kertigépek és alkatrészek

WWW.LOBEST.HU

Illustration Tank and air filter

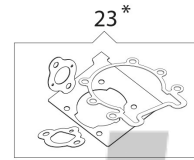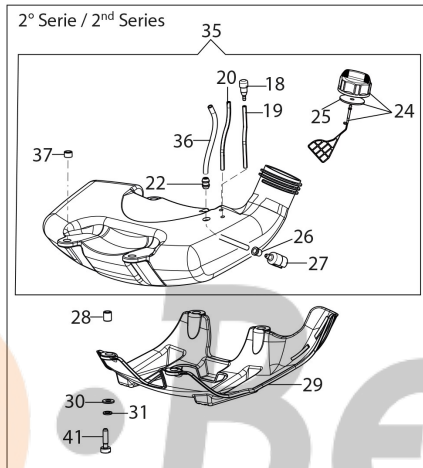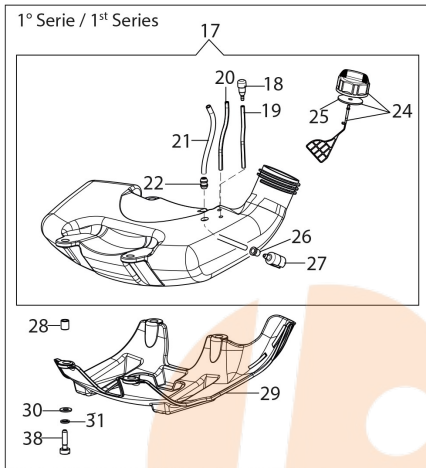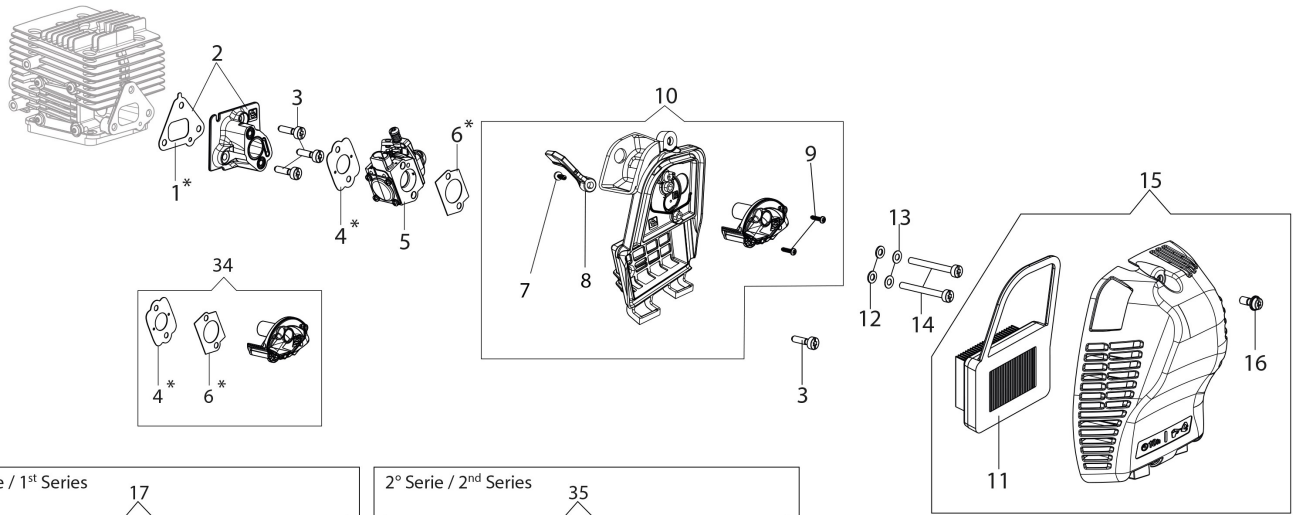

LOBEST Kft.
Kertigépek és alkatrészek

WWW.LOBEST.HU

Illustration Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61400007R	Gasket				
2	1	61400191	Insulator				
3	4	3891048R	Screw				
4	1	61400027R	Gasket				
5	1	2318662BR	Carburetor				
6	1	61400056AR	Gasket				
7		3960017AR	Screw				
7	3	3960087AR	Screw				
8	1	61400123BR	Starter lever				
9	2	3960145R	Screw				
10	1	61400342A	Air filter support set		Maggio 2020 / May 2020		BT3-146-05/20,
10	1	61400342A	Air filter support set	Giugno 2020 / June			BT3-155-01/23, BT3-146-05/20,
11	1	61400229R	Air filter				
12	2	3916005R	Washer				
13	2	3833073R	Washer				
14	2	3891063R	Screw				
15	1	61400261A	Air filter cover + air filter				
16	1	61330040AR	Screw				
17	1	61400343	Complete tank		Agosto 2020 / August 2020		BT3-147-09/20
18	1	61070011AR	Breather valve				
19	1	61380111R	Breather fuel pipe				
20	1	61380112R	Tube				
21	1	3073021AR	Tube		Agosto 2020 / August 2020		BT3-147-09/20
22	1	4161211R	Bush				
23	1	61400183	Gasket set				
24	1	61070079AR	Tank cap				
25	1	61070006R	Gasket				
26	1	61110162BR	Bushing				
27	1	61400322R	Fuel filter				
28	1	61070015R	Spacer				
29	1	61400077R	Support				
30	4	3918010R	Washer				
31	4	3819006R	Washer				
34	1	61400346	Diode Kit	Giugno 2020 / June			BT3-146-05/20
35	1	61400343	Complete tank	Settembre 2020 / September 2020			BT3-147-09/20
36	1	3073021AR	Tube	Settembre 2020 / September 2020			BT3-147-09/20
37	4	61400321R	Spacer	Settembre 2020 / September 2020			BT3-147-09/20
38	4	3891048R	Screw		Agosto 2020 / August 2020		BT3-147-09/20
41	4	3891057R	Screw	Settembre 2020 / September 2020			BT3-147-09/20

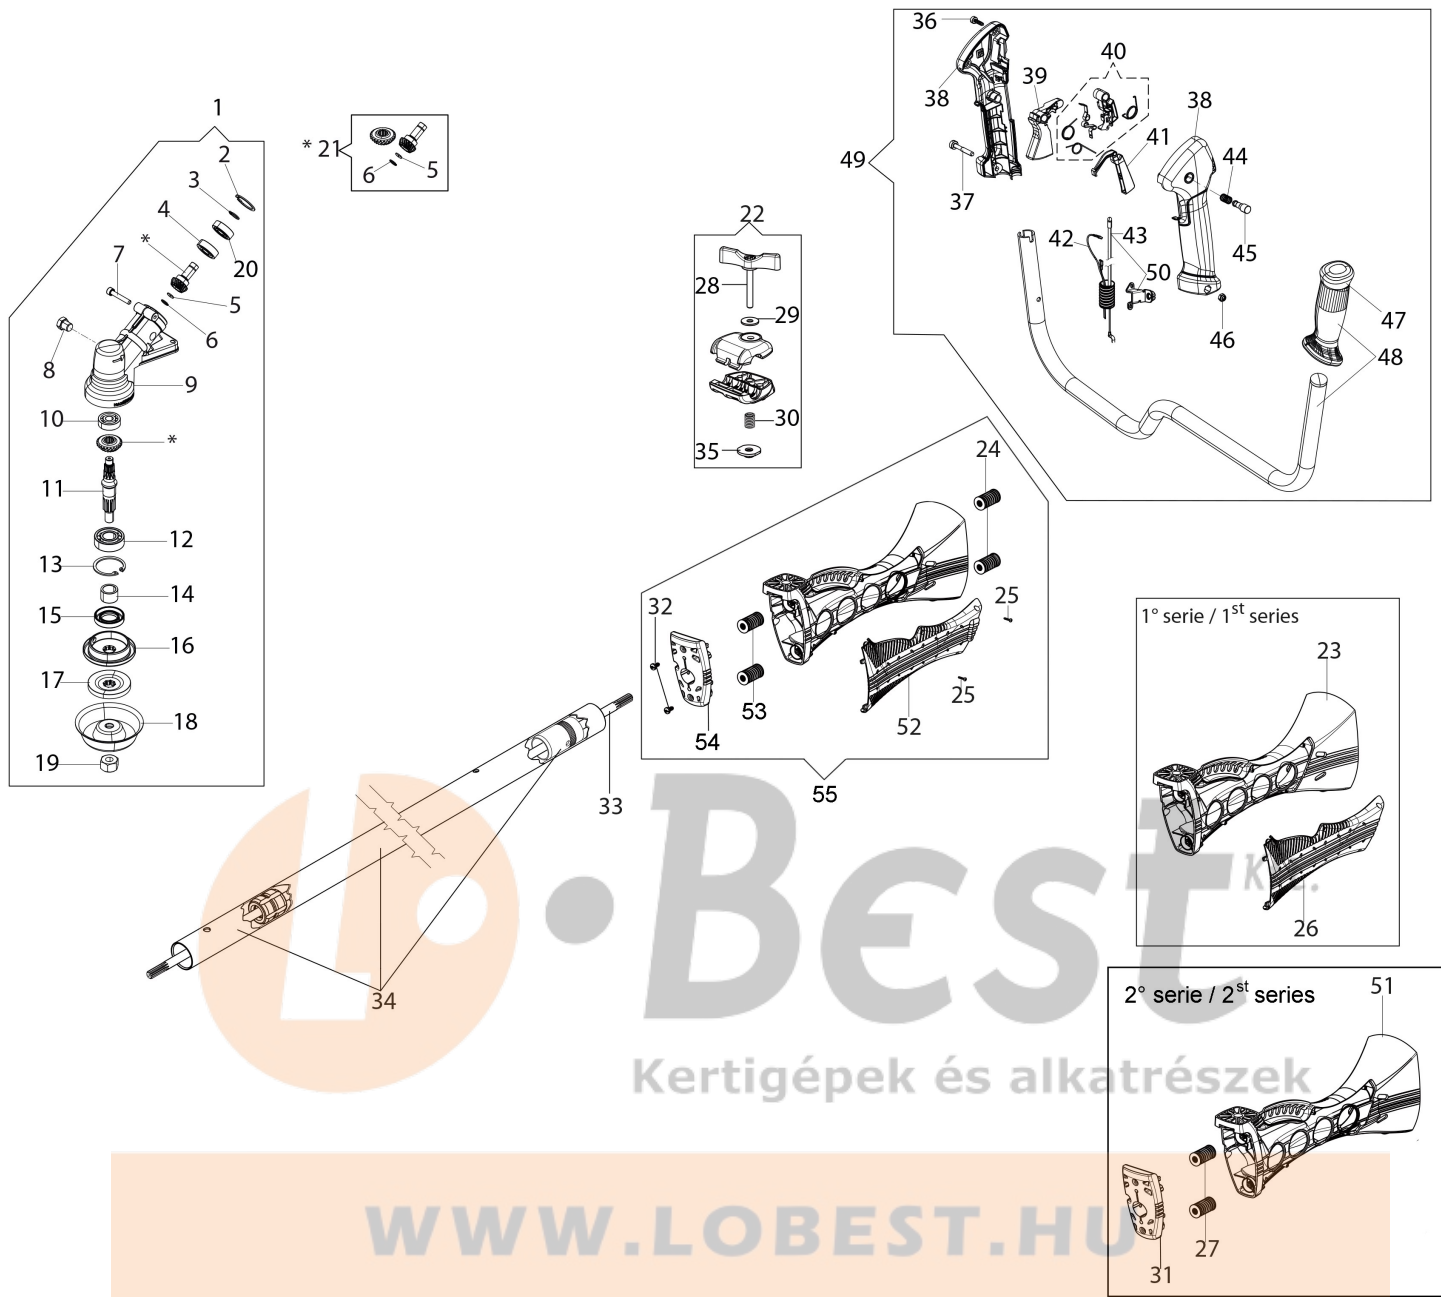


Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61112072BR	Bevel gear Ø32				
2	1	3024012R	Snap ring				
3	1	3024012R	Snap ring				
4	1	3034019R	Bearing				
5	1	4138311A	Ring				
6	1	3025009	Ring				
7	1	3801016R	Screw				
8	1	61040071R	Cap				
9	1	-	Not available for this product				
10	1	3034218R	Bearing				
11	1	61110072R	Shaft				
12	1	3034012R	Bearing				
13	1	3025022R	Snap ring				
14	1	4138668	Spacer				
15	1	3050023R	Seal ring				
16	1	4191247R	Hub				
17	1	4179088R	Flange				
18	1	61110074AR	Guard				
19	1	61110075R	Nut				
20	1	3035023R	Bearing				
21	1	61112058	Bevel gear set				
22	1	61400190	Hub with sheet				
23	1	61400394	Support	2862160001			BT3-153-05/22
24	2	61040033R	Buffer				
25	5	3960018R	Screw				
26	1	61400248R	Guard	2869140001			BT3-149-12/20
27	2	61350205	Spring	2862160001			BT3-153-05/22
28	1	61042030R	Knob				
29	1	3918013R	Washer				
30	1	61040044R	Spring				
31	1	61402049R	Support	2862160001			BT3-153-05/22
32	2	3960099R	Screw				
33	1	4098116R	Drive shaft				
34	1	61400206AR	Tube Ø32				
35	1	61040043R	Washer				
36	3	3893016AR	Screw				
37	1	3891054R	Screw				
38	1	61380097	Pair of handles				
39	1	61380064R	Throttle lever				
40	1	61370294	Lever group				
41	1	61370114R	Lever				
42	1	61400306R	Cable				
43	1	61400301BR	Throttle cable			Per modelli fino a S/N 286019000 abbinare al cod.61350075CR (ref.23) /	
44	1	4100098BR	Spring			For model until S/N 286019000 to be matched	








WWW.LOBEST.HU

Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
45	1	56550185R	Button				
46	1	3914003R	Nut				
47	1	61040140R	Knob				
48	1	61400048R	Handle kit				
49	1	61400189A	Handle kit				
50	1	61400310B	Throttle kit			Per modelli fino a S/N	
51	1	61400394	Support		2862160000		BT3-149-12/20
51	1	61400394	Support	2862160001		For model until S/N	BT3-153-05/22
52	1	61400248R	Guard	2869140002			BT3-149-12/20
53	2	61400396	Hub	2862160001			BT3-153-05/22
54	1	61402102R	Support	2862160001			BT3-153-05/22
55	1	61400394	Support	2862160001			BT3-153-05/22



WWW.LOBEST.HU

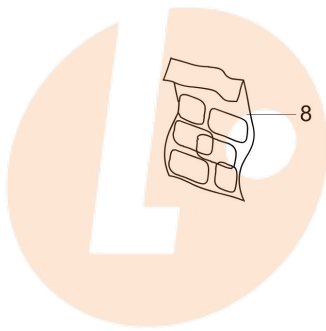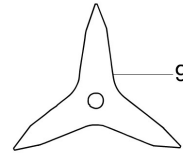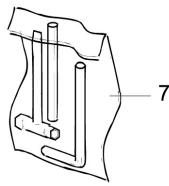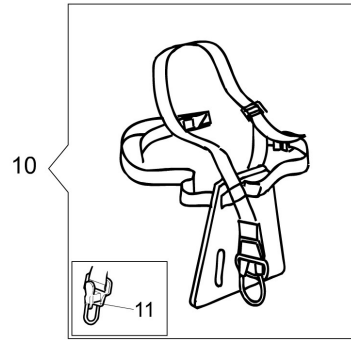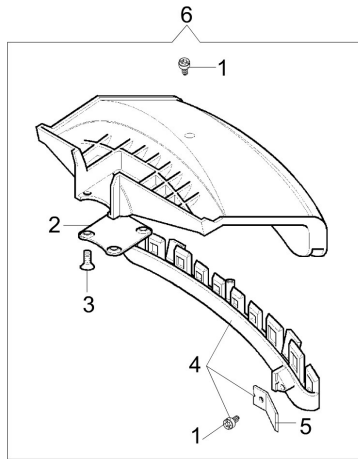


WWW.LOBEST.HU

Illustration Accessories

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	3960040R	Screw				
2	1	4174278R	Plate				
3	4	3802004DR	Screw				
4	1	61380126	Skirt w/blade				
5	1	4174275R	Blade				
6	1	61380125	Guard kit				
7	1	4191240	Tool kit				
8	1	61400192	Labels kit				
9	1	4095665BR	3-tooth blade				
10	1	63070003AR	Harness				
11	1	3065001	Hook				



WWW.LOBEST.HU

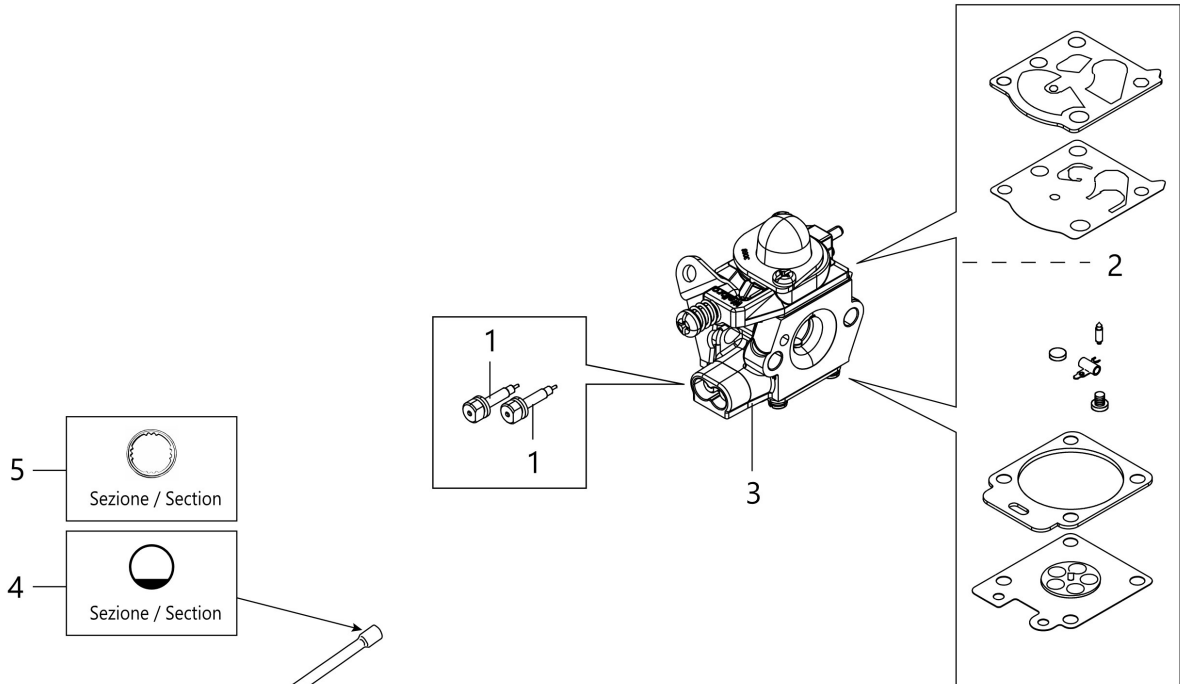

WWW.LOBEST.HU

Illustration Carburetor WT-1199

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2318643R	Adjust. screw MAX				
2	1	2318671	Repair kit				
3	1	2318662BR	Carburetor				
4	1	3052036R	Special screwdriver "D-style" type				
5	1	2304001R	Special screwdriver KNURL-STYLE				EI02-02_22



WWW.LOBEST.HU

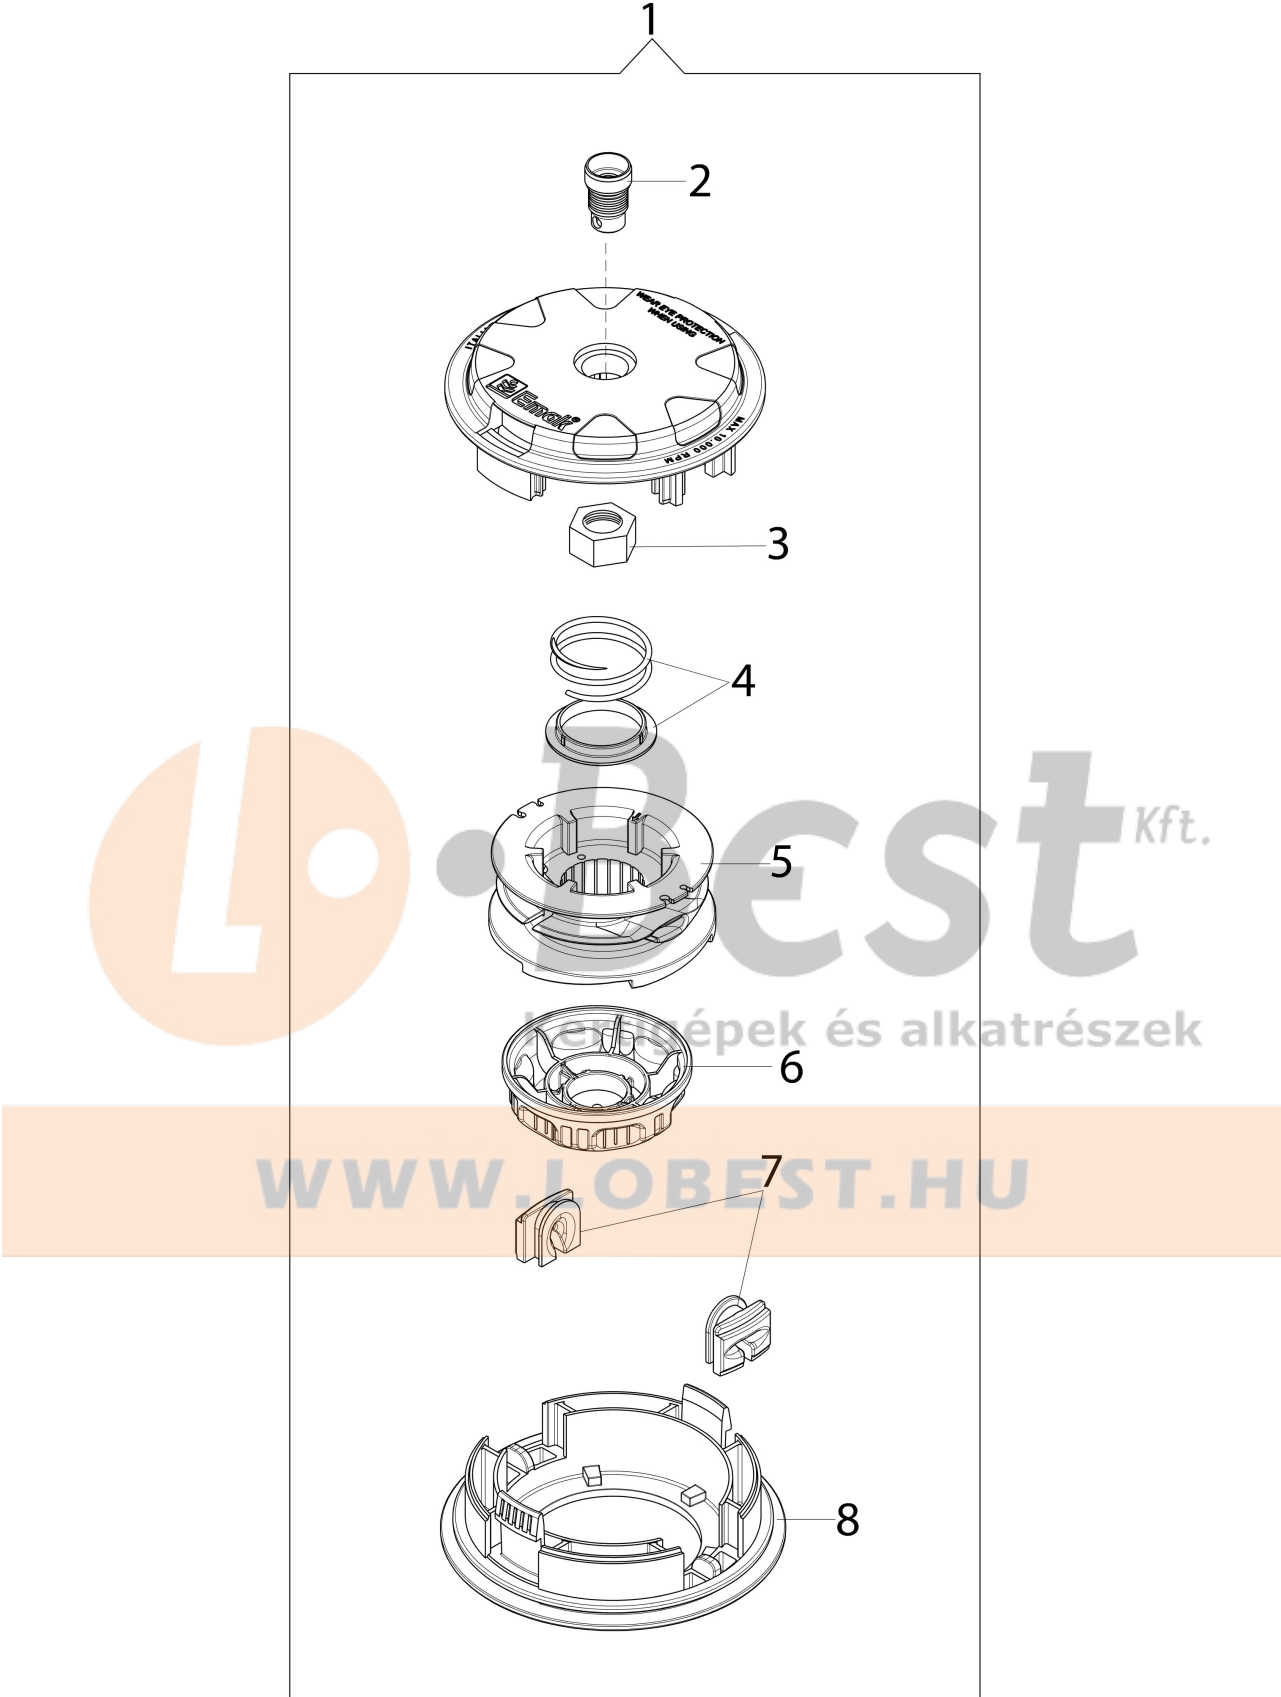


Illustration Illustrated parts list (Head "Load and Go" Ø130)

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	63129015	Head Load&Go			ExtraLife	
1	1	63129008	Head Load&Go			Easy&LongLife	
2	1	63120041R	Insert				
3	1	63120040R	Nut				
4	1	63120031R	Kit spring				
5	1	63120020AR	Ignition coil				
6	1	63120030AR	Knob			ExtraLife	
6	1	63120007AR	Knob			Easy&LongLife	
7	2	63120001R	Bushing				
8	1	63120005R	Cover				



WWW.LOBEST.HU