

BC 350 T Brushcutter



Documents

Engine

Starter assy and clutch

Tank and air filter


Transmission

Carburetor WT-1099

Accessories



WWW.LOBEST.HU

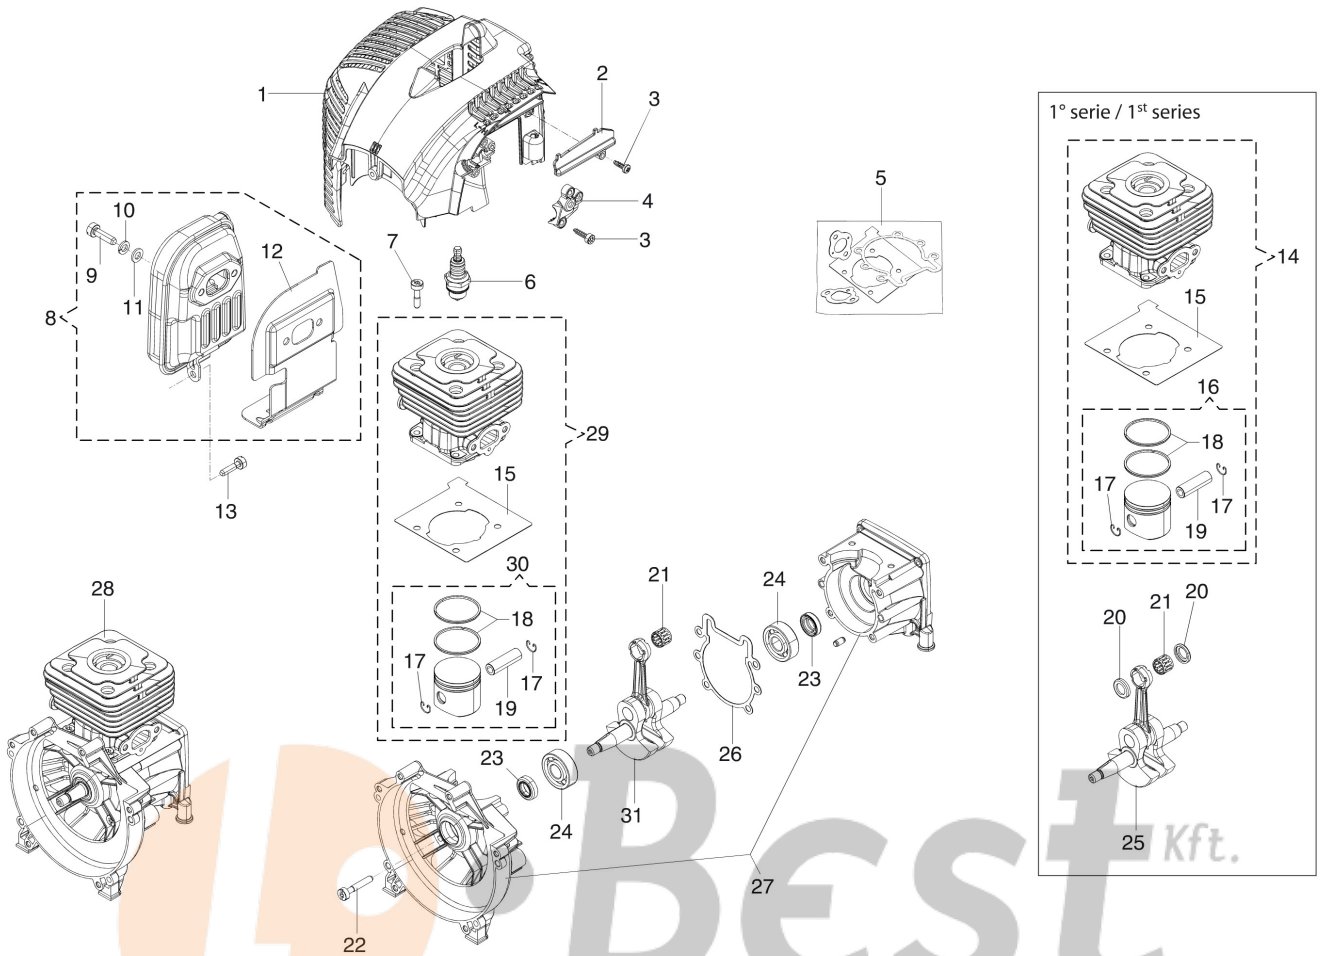


Kertigépek és alkatrészek

WWW.LOBEST.HU

Illustration Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61382031R	Engine cover				
2	1	61380050R	Cover				
3	4	3893013AR	Screw				
4	1	61250250R	Stopper for cable				
5	1	61202038BR	Gasket set				
6	1	3055115R	Spark plug bpmr7a				
7	4	3891046R	Screw				
8	1	61422017AR	Muffler assy				
9	2	3891086R	Screw				
10	2	3819010R	Washer				
11	2	3916006R	Washer				
12	1	61380036AR	Deflector				
13	1	3891048R	Screw				
14	1	61212005B	Complete cylinder Ø38		SN 2499030000		BT3-141-05/18
15	1	61350272R	Gasket				
16	1	61212004B	Piston assy Ø38		SN 2499030000		BT3-141-05/18
17	2	004900061R	Ring				
18	2	4196166R	Piston ring				
19	1	50110047R	Piston pin				
20	2	50110043AR	Spacer		SN 2499030000		BT3-141-05/18
21	1	50110044R	Bearing				
22	4	3891057R	Screw				
23	2	094000099R	Seal ring				
24	2	094000006R	Bearing				
25	1	61200001R	Crankshaft		SN 2499030000		BT3-141-05/18
26	1	61200006AR	Gasket				
27	1	61350346	Crankcase assy				
28	1	61252075BR	Short block				
29	1	61210137	Complete cylinder	SN 2499030001			BT3-141-05/18
30	1	61210136	Piston assy Ø38	SN 2499030001			BT3-141-05/18
31	1	61330226R	Crankshaft	SN 2499030001			BT3-141-05/18

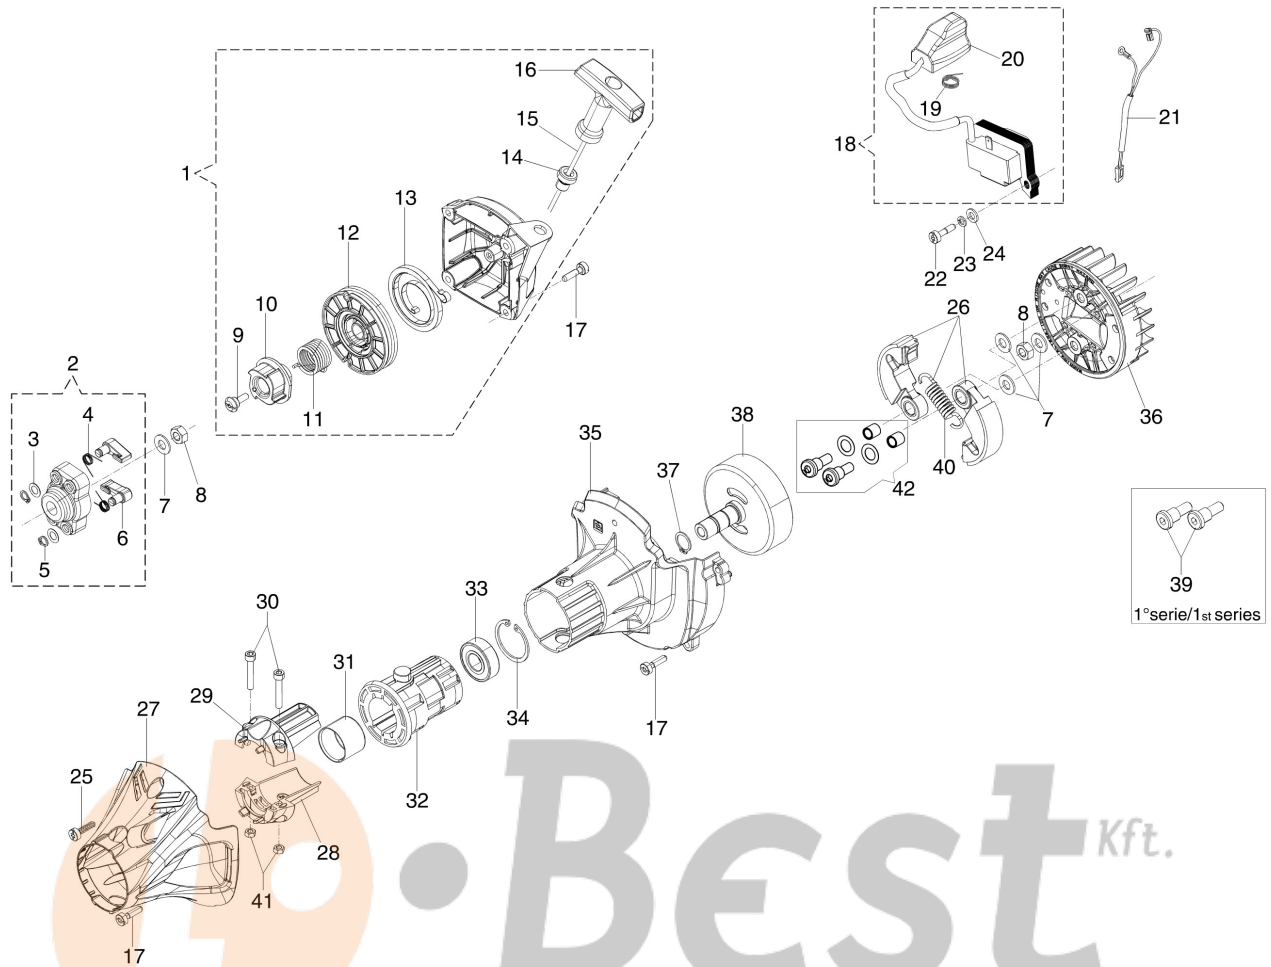


Best Kft.

Kertigépek és alkatrészek

WWW.LOBEST.HU

Illustration Starter assy and clutch

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61380101A	Starter assy	SN 2497190001			BT3-137-05/17
2	2	61350142R	Clutch driver				
3	2	3064010R	Washer				
4	2	4191017AR	Spring				
5	2	3024007R	Ring				
6	2	61350145R	Pawl				
7	3	3818011AR	Washer				
8	1	3912009	Nut				
9	1	50160024	Screw		SN 2497189999		BT3-137-05/17
9	1	61350342R	Screw	SN 2497190001			BT3-137-05/17
10	1	61350204AR	Sprocket				
11	1	61350203BR	Spring				
12	1	61350139R	Starter pulley				
13	1	004000132R	Spring				
14	1	072700089R	Bushing				
15	1	4098073R	Starter rope				
16	1	61200015R	Starter handle				
17	9	3891048R	Screw				
18	1	2501006AR	Ignition coil				
19	1	50050127	Spring				
20	1	61380060AR	Spark plug cap				
21	1	61250282AR	Cable				
22	2	3891046R	Screw				
23	2	3819006R	Washer				
24	2	3916006R	Washer				
25	1	3893060R	Screw				
26	1	4191153BR	Clutch				
27	1	61420022R	Cover				
28	1	61250020AR	Clamp				
29	1	61250019R	Clamp				
30	2	3801016R	Screw				
31	1	4196038R	Bushing				
32	1	61250023AR	Sleeve				
33	1	3035042R	Bearing				
34	1	3025022R	Snap ring				
35	1	61430036R	Starter case				
36	1	61250014AR	Flywheel				
37	1	3024015R	Ring				
38	1	4191030R	Clutch drum				
39	2	4191027FR	Pin		SN 2467429999		BT3-139-11/17
40	1	4191028R	Spring				
41	2	3914003R	Nut				
42	1	61420020	Fitment system	SN 2467430001			BT3-139-11/17

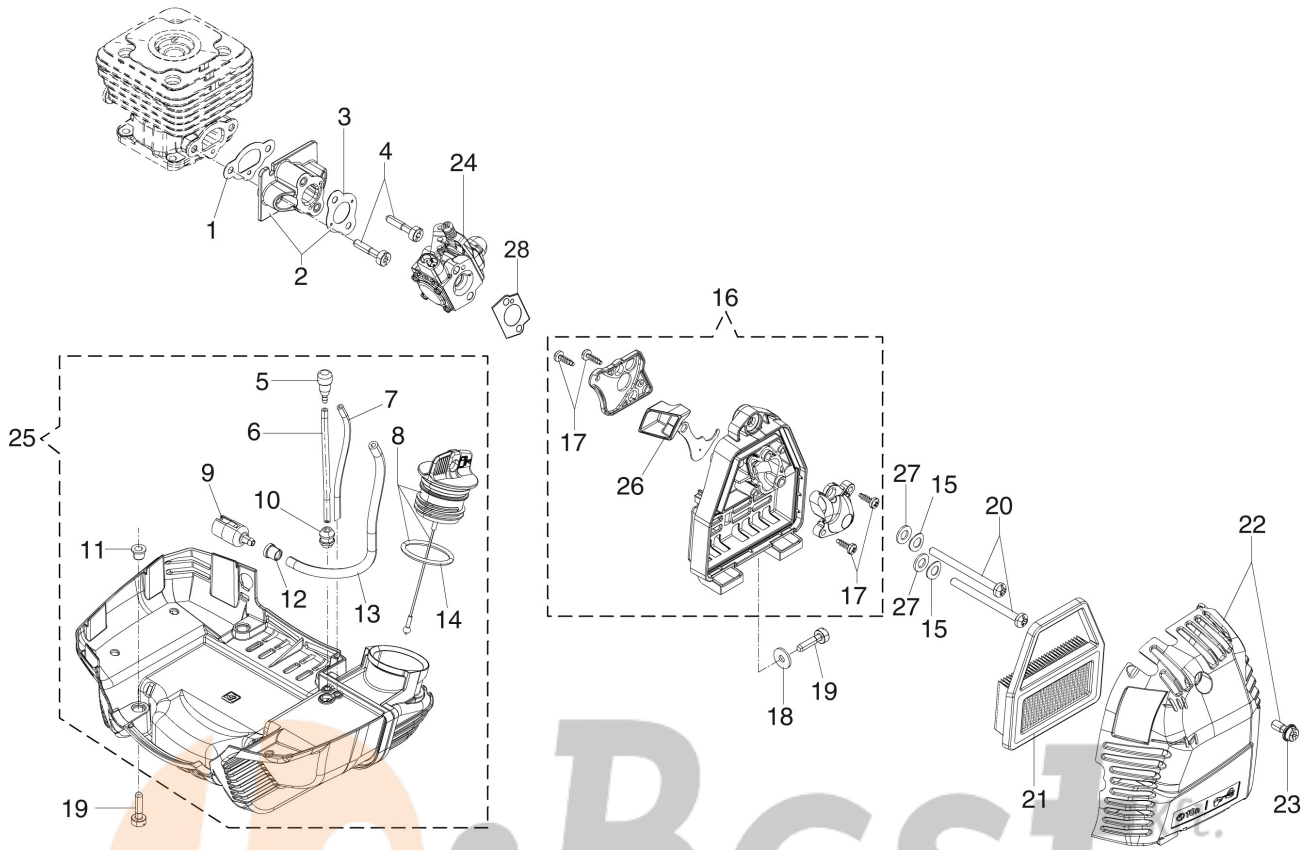

LOBEST
Kertigépek és alkatrészek


WWW.LOBEST.HU

Illustration Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61200019AR	Gasket				
2	1	61200198	Insulator				
3	1	61200196AR	Gasket				
4	2	3891053R	Screw				
5	1	61400367R	Breather valve				
6	1	61380075R	Breather fuel pipe				
7	1	61250228R	Tube				
8	1	61380100	Tank cap				
9	1	61400322R	Fuel filter				
10	1	4161211R	Bush				
11	4	61380017R	Spacer				
12	1	61110162BR	Bushing				
13	1	3073020AR	Tube				
14	1	3049024R	Gasket				
15	2	3833073R	Washer				
16	1	61382040AR	Air filter support set				
17	4	3893013AR	Screw				
18	1	3918005R	Washer				
19	5	3891048R	Screw				
20	2	3891067R	Screw				
21	1	61380013AR	Air filter				
22	1	61380099	Air filter cover				
23	1	61330040AR	Screw				
24	1	2318987BR	Carburetor WT-1099				EI02-02_22
25	1	61380114AR	Complete tank				
26	1	61380074AR	Starter lever				
27	2	3916005R	Washer				
28	1	61350155R	Flange				

Best Kft.
Kertigépek és alkatrészek

WWW.LOBEST.HU

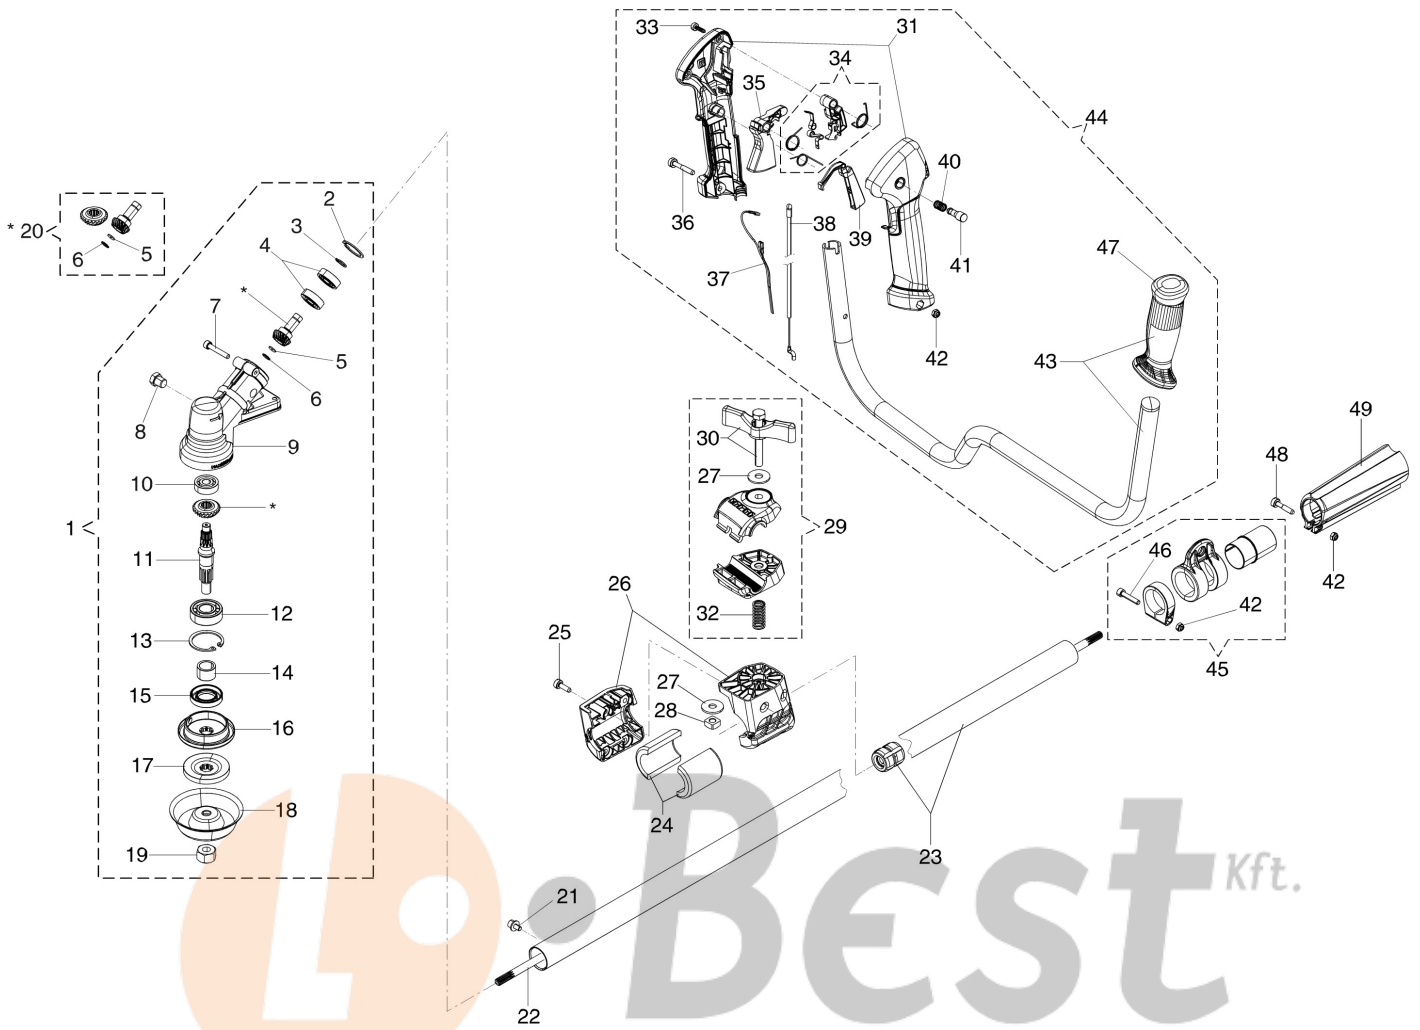

Kertigépek és alkatrészek

WWW.LOBEST.HU

Illustration Transmission


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61250287A	Bevel gear Ø28				
2	1	3025019R	Ring				
3	1	3024012R	Snap ring				
4	2	3035023R	Bearing				
5	1	4138311A	Ring				
6	1	3025009	Ring				
7	1	3901016	Screw				
8	1	61040071R	Cap				
9	1	61040144R	Gear case				
10	1	3034218R	Bearing				
11	1	61250054R	Pin				
12	1	3034012R	Bearing				
13	1	3025022R	Snap ring				
14	1	61040066R	Spacer				
15	1	3050018R	Seal ring				
16	1	61040145R	Hub				
17	1	4179089R	Flange				
18	1	61110074AR	Guard				
19	1	61110075R	Nut				
20	1	61040133A	Bevel gear set				
21	1	61052007	Screw				
22	1	61202109R	Shaft				
23	1	61252049R	Tube Ø28				
24	2	074000035R	AV-mount				
25	4	3891038R	Screw				
26	1	61370275B	Support set				
27	2	3918013R	Washer				
28	1	3980011	Nut				
29	1	61370274A	Complete clamp				
30	1	61042030R	Knob				
31	1	61380097	Pair of handles				
32	1	61040044R	Spring				
33	3	3893016AR	Screw				
34	1	61370294	Lever group				
35	1	61380064R	Throttle lever				
36	1	3891054R	Screw				
37	1	61380067R	Cable			con tubo corrugato; with corrugated tube	
38	1	61380066R	Throttle cable				
39	1	61370114R	Lever				
40	1	4100098BR	Spring				
41	1	56550185R	Button				
42	3	3914003R	Nut				
43	1	61382024R	Handle and knob				
44	1	61380098	Complete handle				

Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
45	1	4179194AR	Band Ø28				
46	1	3801015R	Screw				
47	1	61040140R	Knob				
48	1	3891053R	Screw				
49	1	61380052R	Guide cable				



WWW.LOBEST.HU

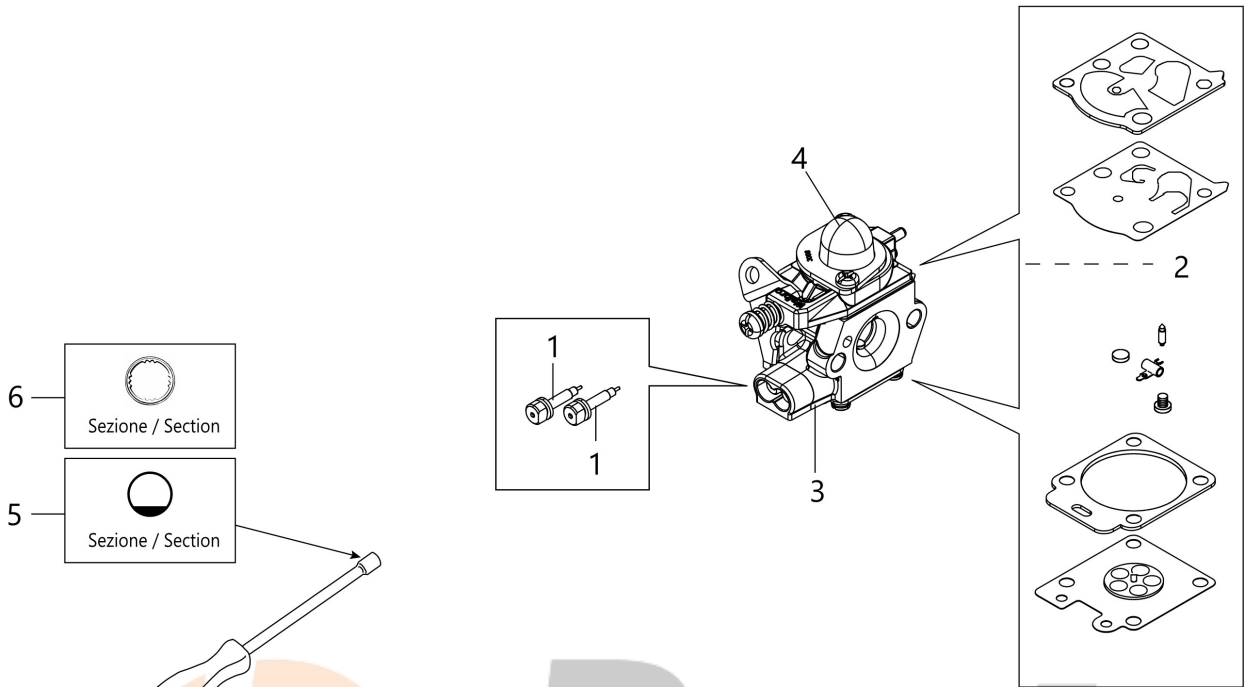








WWW.LOBEST.HU

Illustration Carburetor WT-1099

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	2318667R	Adjust. screw				
2	1	2318671	Repair kit				
3	1	2318987BR	Carburetor WT-1099				EI02-02_22
4	1	2318572	Primer pump				
5	1	3052036R	Special screwdriver "D-style" type				
6	1	2304001R	Special screwdriver KNURL-STYLE				EI02-02_22



WWW.LOBEST.HU

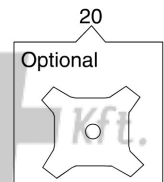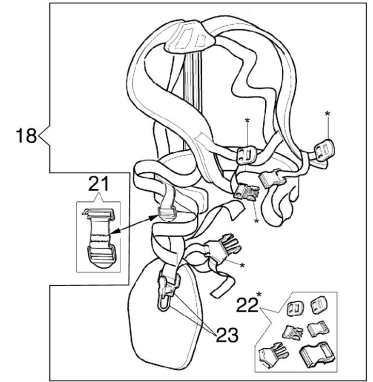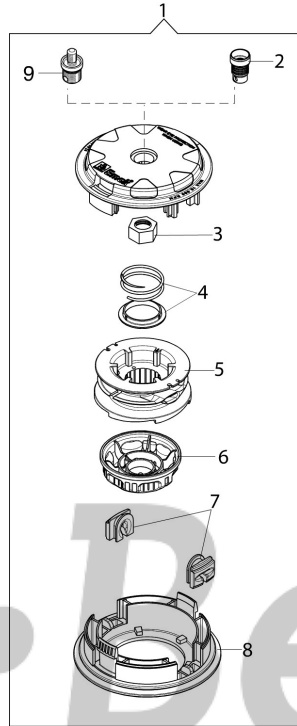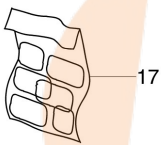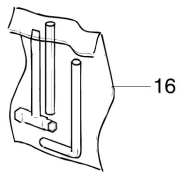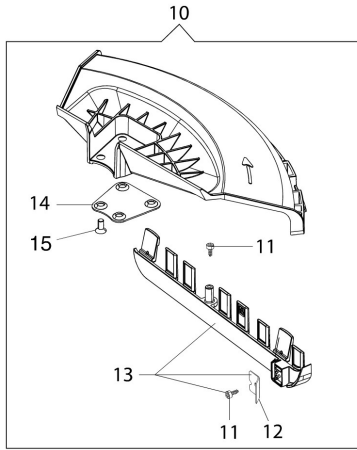

Kertigépek és alkatrészek

WWW.LOBEST.HU

Illustration Accessories

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	63129008	Head Load&Go				
2	1	63120041R	Insert				
3	1	63120040R	Nut				
4	1	63120031R	Kit spring				
5	1	63120020AR	Ignition coil				
6	1	63120007AR	Knob				
7	2	63120001R	Bushing				
8	1	63120005R	Cover				
9	1	63120042R	Insert (male)				
10	1	61280332	Guard				
11	2	3960040R	Screw				
12	1	4174275R	Blade				
13	1	61380126	Skirt w/blade				
14	1	4174278R	Plate				
15	4	3802004DR	Screw				
16	1	61370214R	Tool kit				
17	1	61380103	Labels kit				
18	1	63070003AR	Harness				
19	1	4095673BR	3-tooth blade				
20	1	4095681AR	4-tooth blade				
21	1	63070036	Hooking spring				
22	1	63070025	Buckle set				
23	1	3065001	Hook				



WWW.LOBEST.HU